

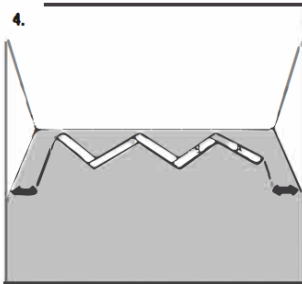
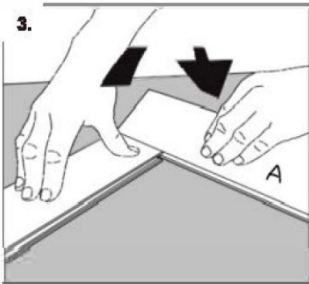
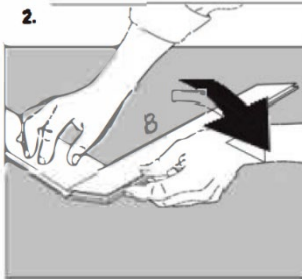
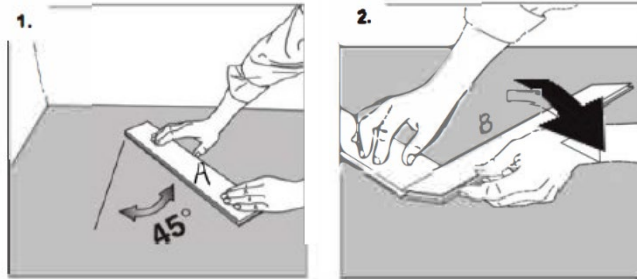
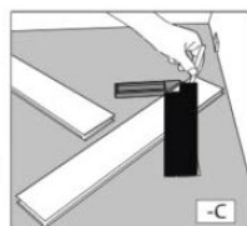





9.5mm SPC Herringbone Installation Guidelines

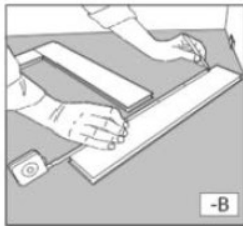


1. **Start** – Begin at the left corner of your chosen wall. Place an **A-panel** at a 45° angle with its long side facing the wall. The gap to the wall must be less than one panel length.
2. **Add B-panel** – Angle the long side of a **B-panel** against the short side of the A-panel. Fold down to lock. Check grooves align.
3. **Continue** – Alternate A- and B-panels along the wall, locking each in place.
4. **Centre row** – Ensure the first row is centred. If the gaps at both ends are too wide, add a panel on the right side.

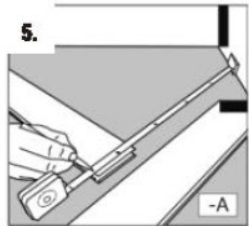


5. **Cut end panels** – Measure, and cut the end panels to size, and fit. Leave a 8-10 mm gap at all walls.


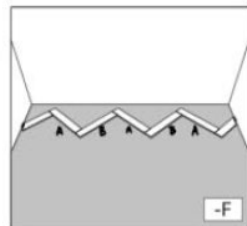
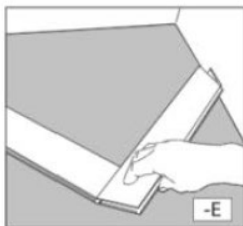
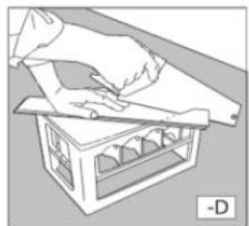


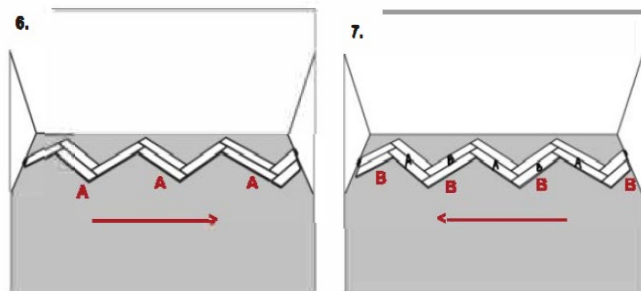

Panel A

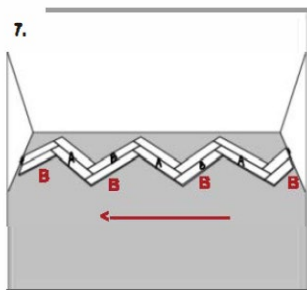


Panel B

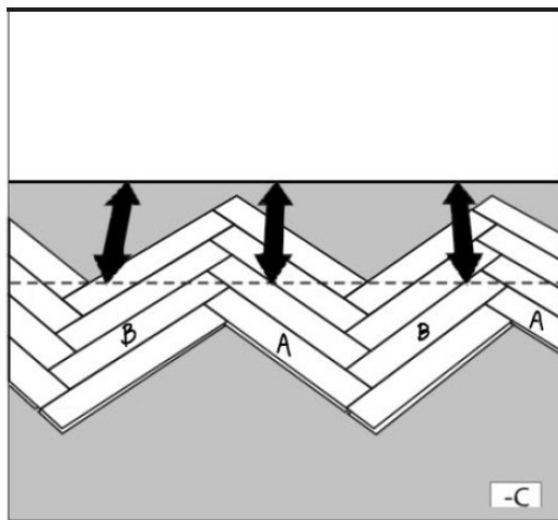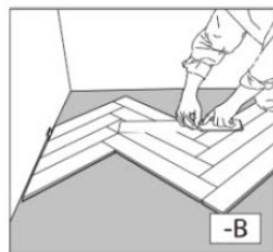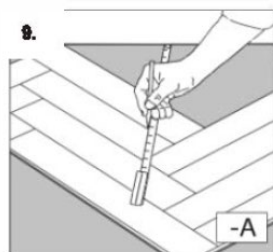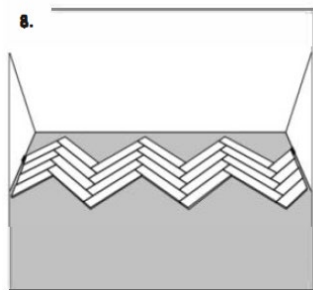

Second row – Start with an A-panel, place against the previous row, and fold down to lock.


- 6. Install all the A-panels:** Start from the left and work to the right across the second row. Finish with a cut piece of panel (step 5).
- 7. Install all the B-panels:** Start from the right and work to the left across the second row. Finish with a cut piece of panel (step 5).
- 8. Complete four rows:** Install additional rows until four full rows are finished.

- 9. Align starting rows:** The first four rows must be cut parallel to the wall. Measure and mark a straight, parallel line at the required distance from the wall.

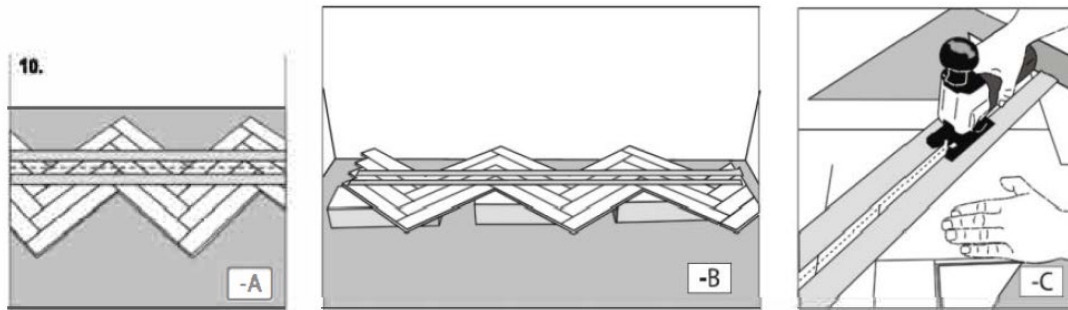

10. Alternative method for cutting the first rows: Leave the left-end panels out. Tape and cut along the marked line with the flooring supported on a few packages. Reinstall the adjusted rows, then add the remaining end panels from the last row to the first, applying glue inside the groove.



(Number the panels and take photos if necessary to keep them in order. Dismantle the panels and cut them to size along the previously marked line.)

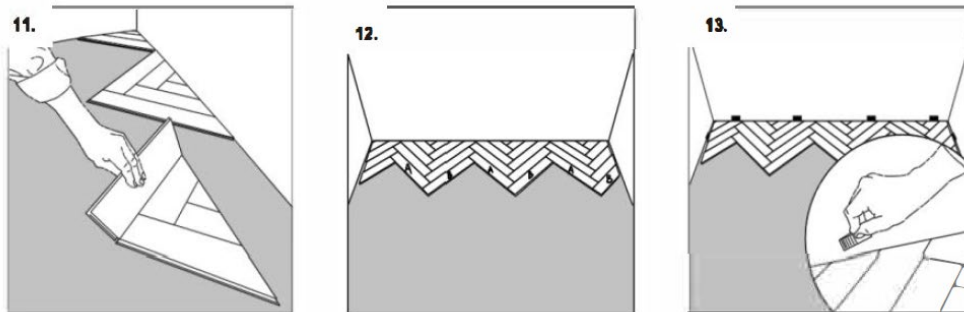



11. Install the starting triangles: Connect the cut panels into triangles, starting at the left corner. Use glue for small parts.

12. Install more rows: From left to right install all the A-panels, finish with a cut piece, then from right to left install all the B-panels. End with a cut end panel.

13. Insert spacers: Leave a 8–10 mm expansion gap between the flooring and the wall.

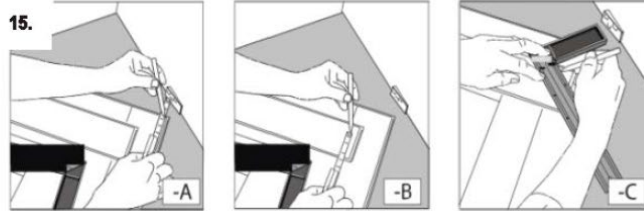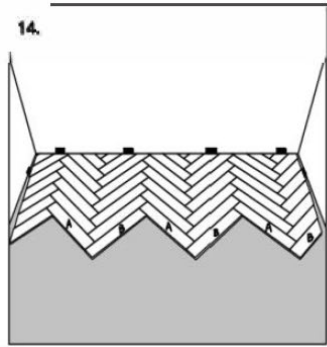

- 14. Subsequent rows:** Start each row by installing all the A-panels from left to right, then install all the B-panels from right to left.
- 15. Last row:** Measure and cut panels to fit. Use glue for the smallest pieces if needed.

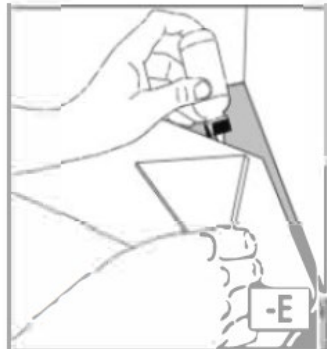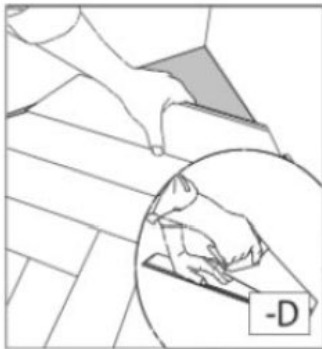

- 16. Finish:** Remove spacers and cover the expansion gap with skirting boards or beading.